



Milesight-Troubleshooting

NVR Hard Disk Installation

NVR Models	MS-N7016/MS-N8016	Update	2015.07.17
------------	-------------------	--------	------------

1. MS-N7000 series Hard Disk Installation

Step1: Unscrew the back and both sides' screws to open the upper lid.



Figure 1-1



Figure 1-2



Figure 1-3

Step2: Install the hard disks into NVR with screws showed in below pictures.(SATA Slots of hard disk should be toward inside NVR.)

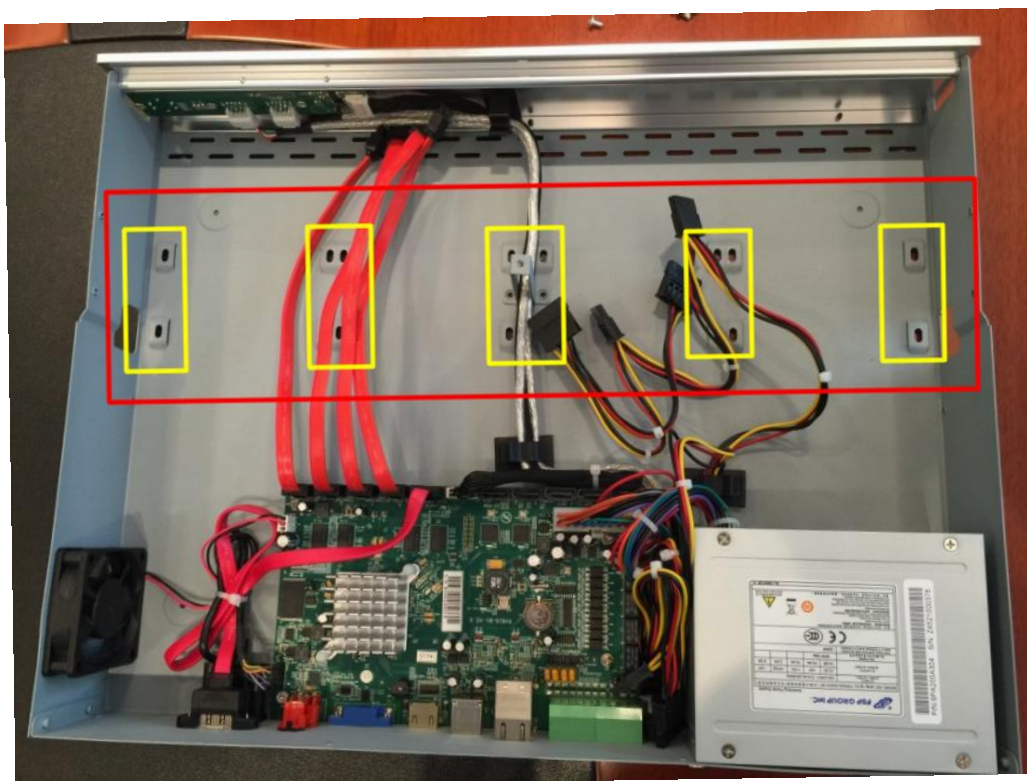


Figure 1-4



Figure 1-5



Figure 1-6

Step3: Join the power and data connectors to corresponding hard disk.

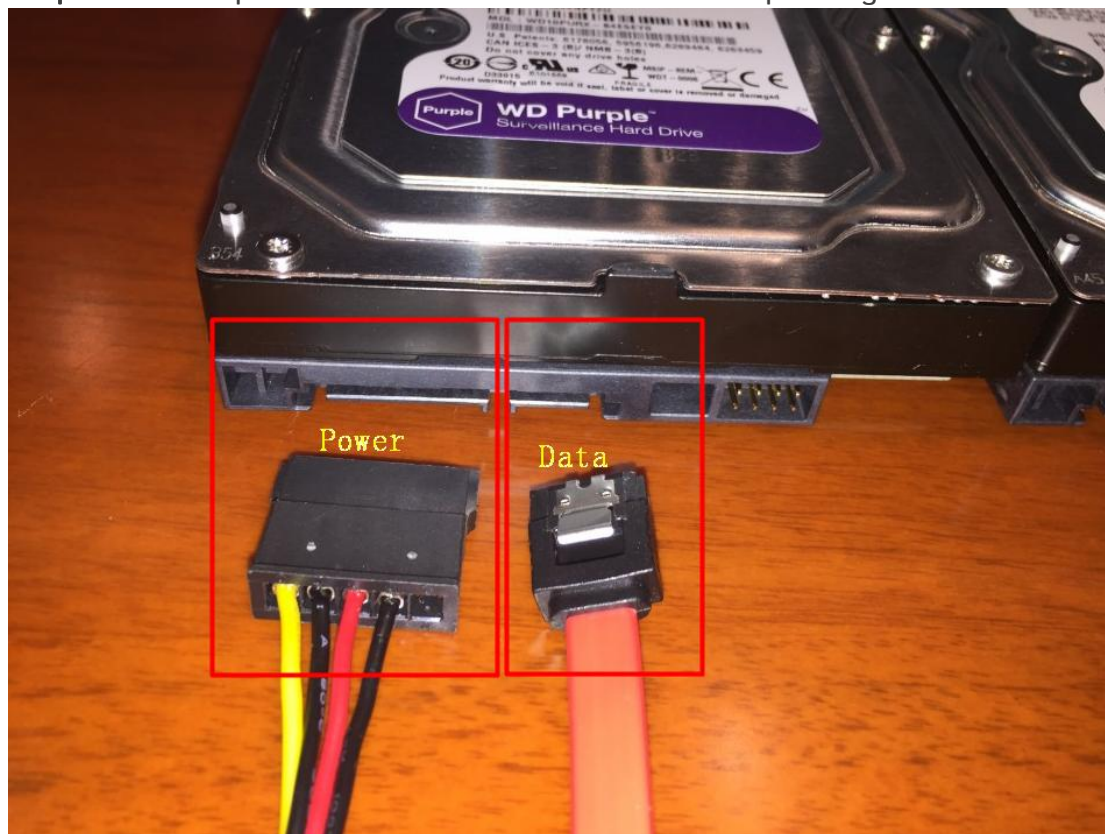


Figure 1-7

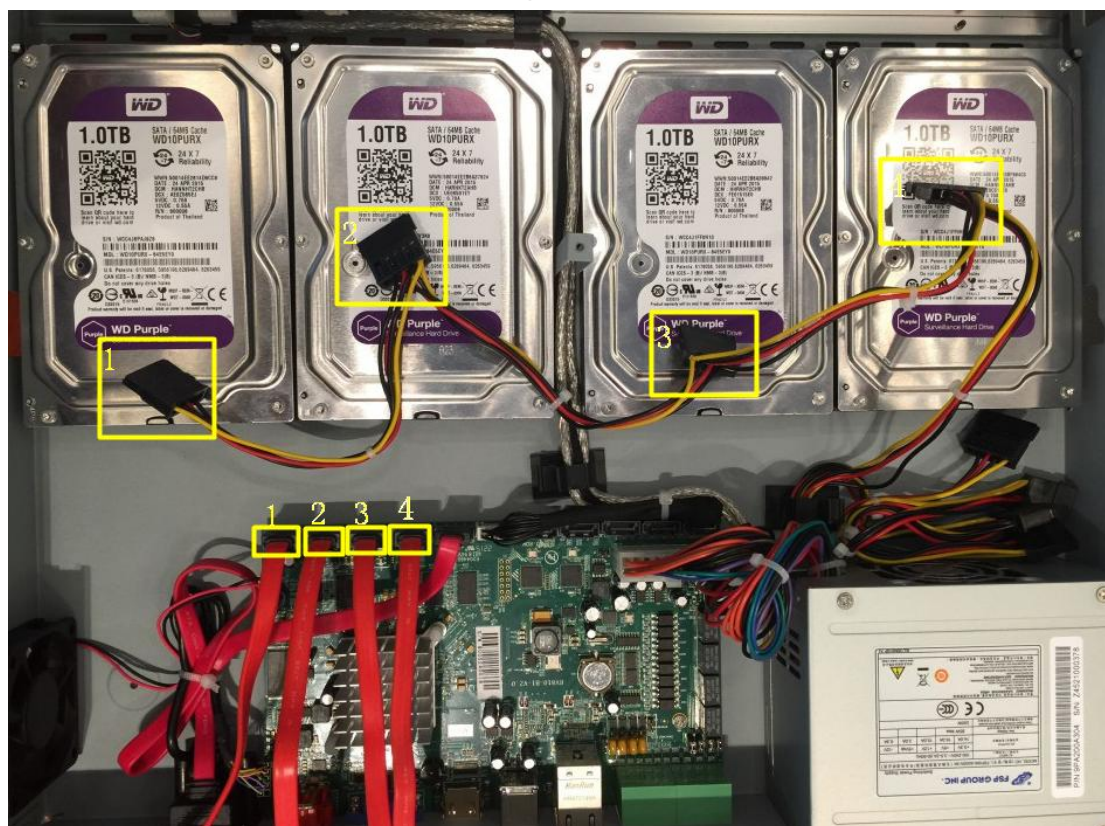


Figure 1-8



Figure 1-9

Note:

The data connector sequence of MS-N7000 series is different from MS-N8000 series'.

2. MS-N8000 series Hard Disk Installation

Step1: Unscrew the back and both sides' screws to open the upper lid.



Figure 2-1



Figure 2-2



Figure 2-3

Step2: Uninstall the upper hard disk panel.



Figure 2-4

Step3: Install the hard disks into NVR with screws showed in below pictures.(SATA slots of hard disks should be toward inside NVR)

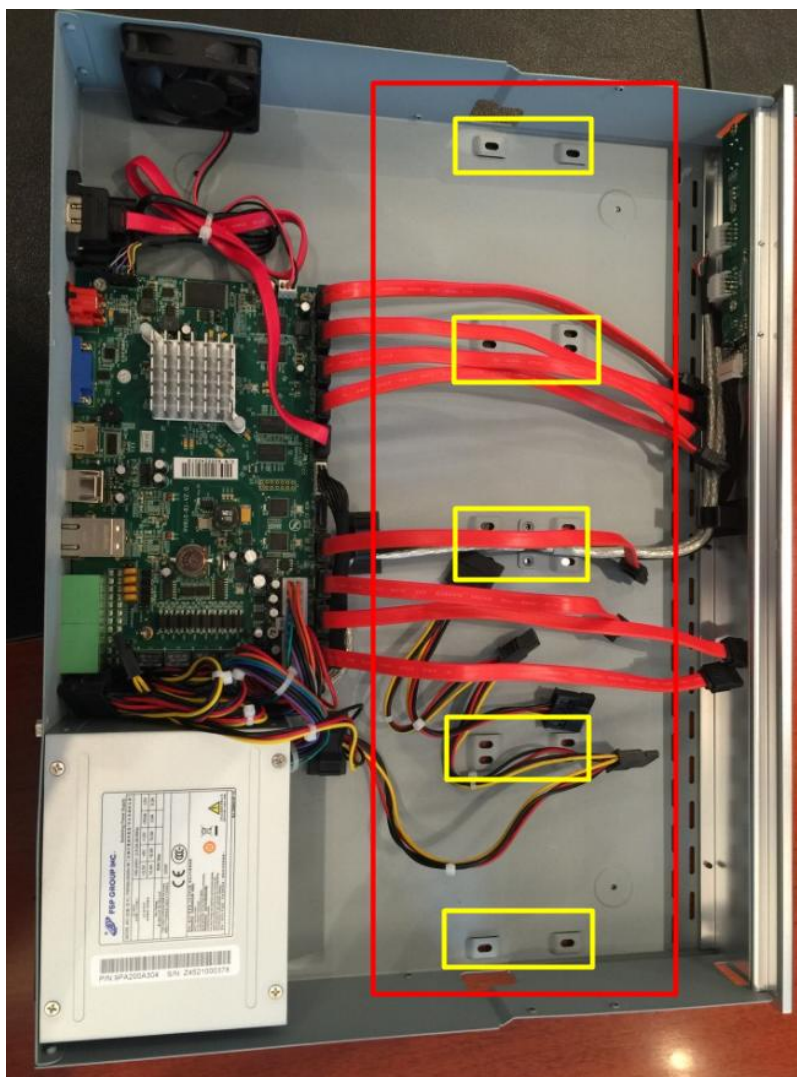


Figure 2-5



Figure 2-6

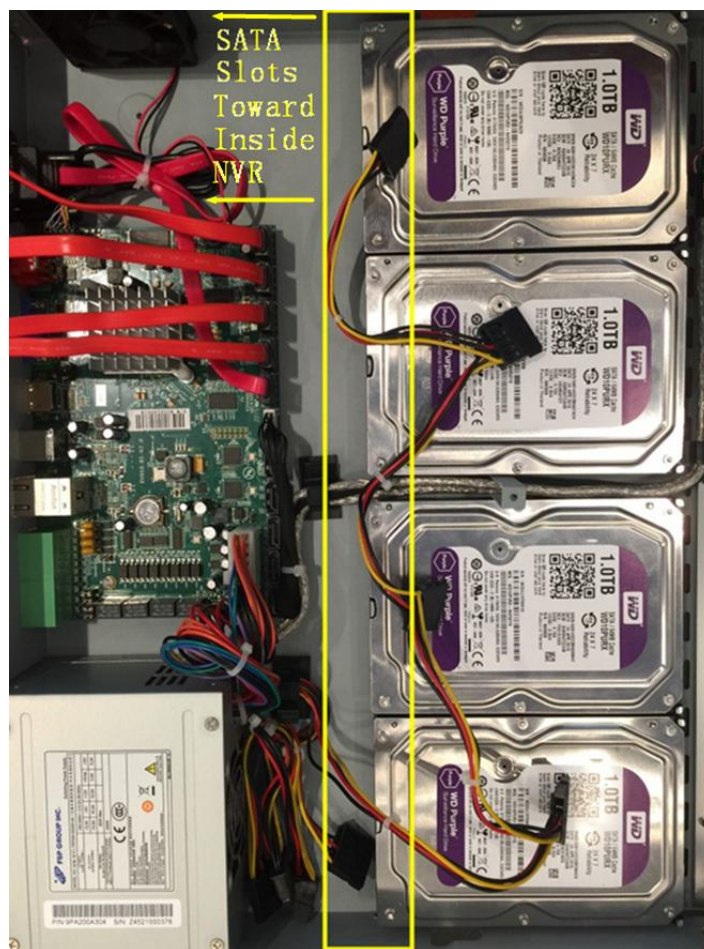


Figure 2-7

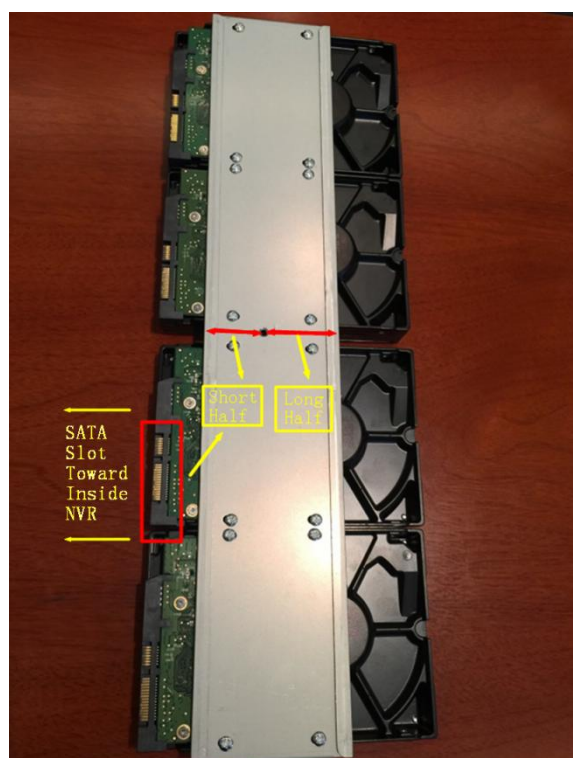


Figure 2-8

Note:

Make sure that the sata slots are in SHORT HALF side and the sata slot toward inside NVR.

Step4: Join the power connectors to corresponding hard disks.(Install lower hard disk panel **before** upper one)

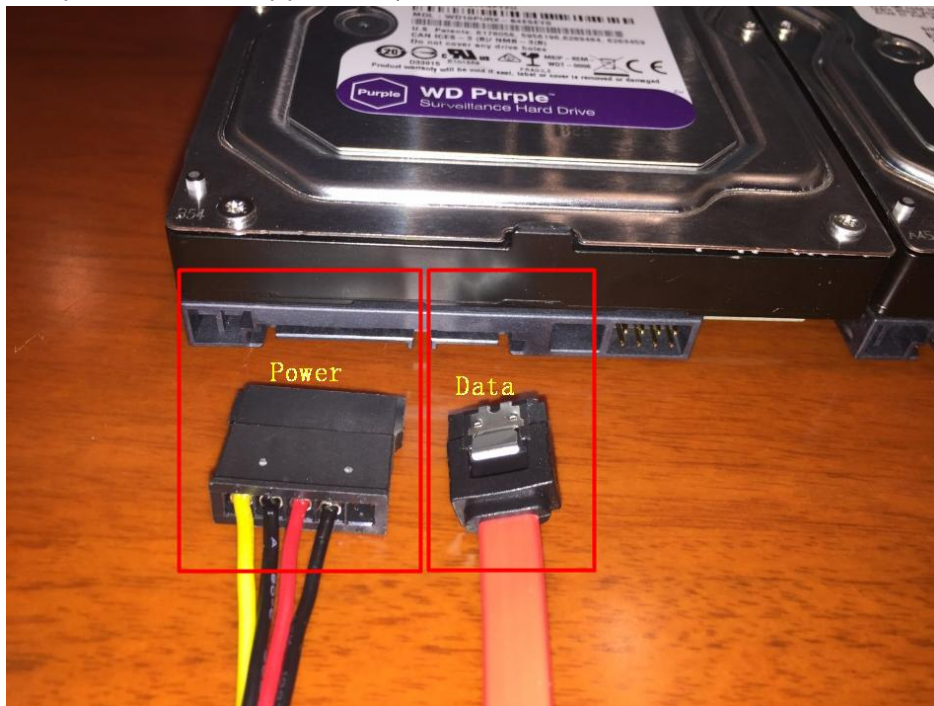


Figure 2-9



Figure 2-10

Step5: Join the data connectors to corresponding hard disk.(Check the connection by below sequence)

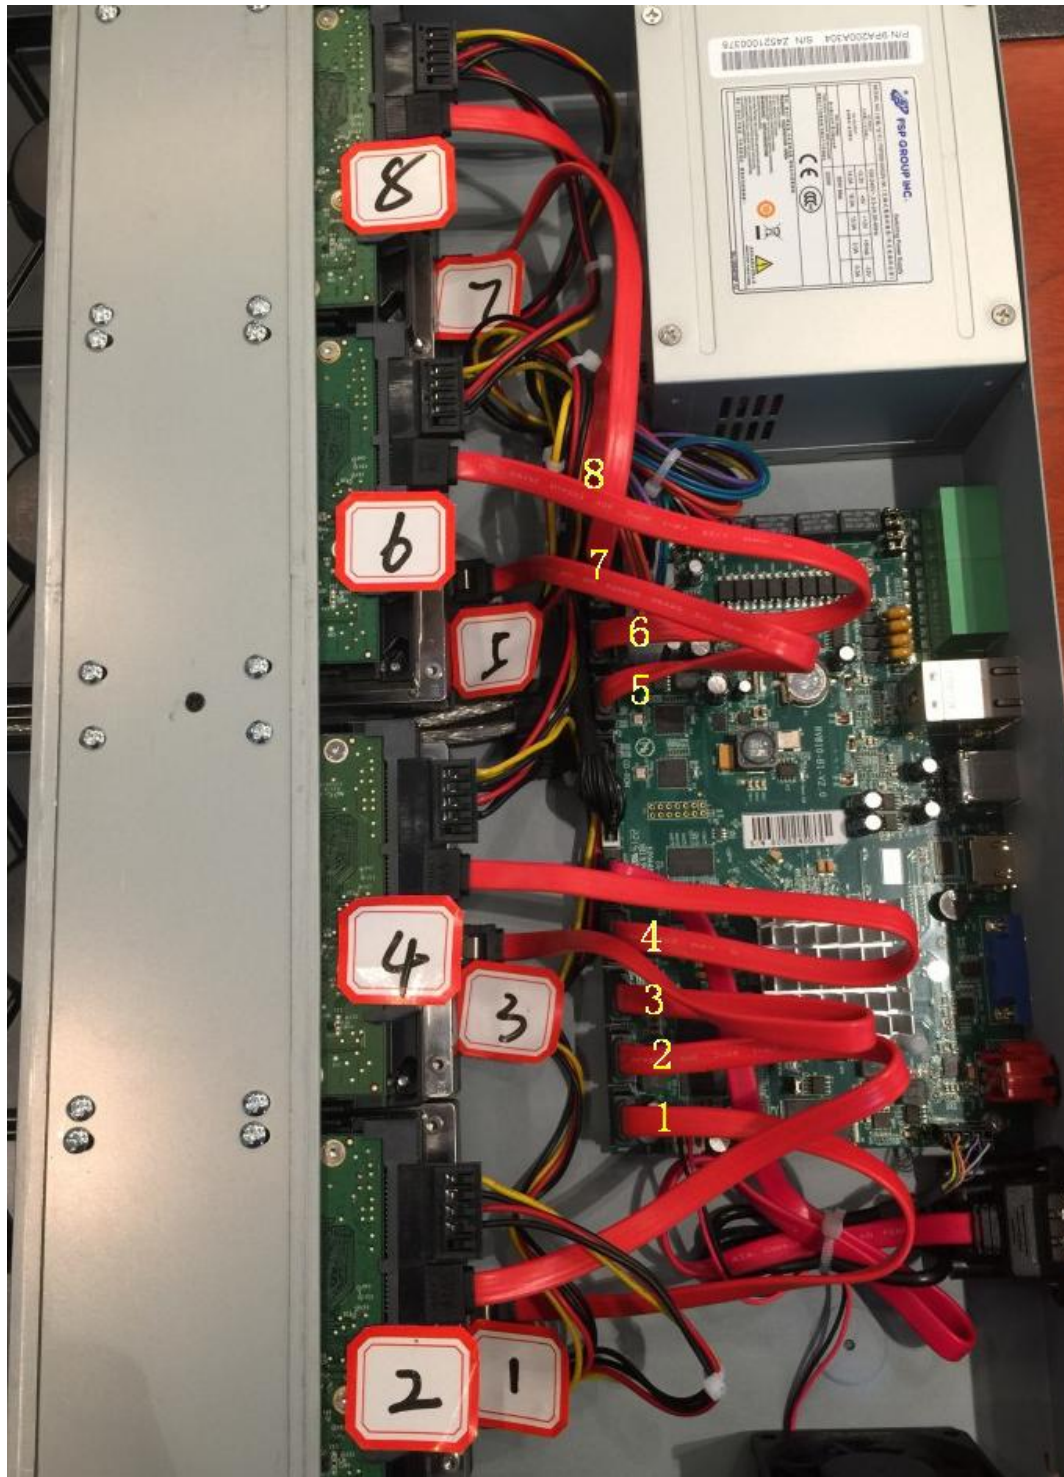


Figure 2-11

Note:

The data connector sequence of MS-N7000 series is different from MS-N8000 series'.

-END-